

Cleaning and care

To ensure proper functioning and full performance from your trimmer, clean and oil the appliance regularly.

Cleaning the blade set




Damage to the clipper head caused by its removal!

- Never remove the clipper head. Once removed it cannot be reattached.

If used regularly, the blade set should be thoroughly cleaned **once a day**.

- Switch the appliance off.
- Remove the comb attachment if fitted.
- Use the cleaning brush to remove any hairs.

Oiling the blade set

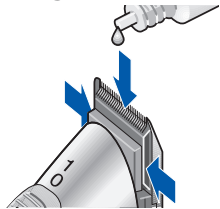

To maintain the high-quality cutting performance of the blade set as long as possible, it must be oiled regularly – **every 10 minutes**.

- Remove the comb attachment if fitted.
- Lubricate the areas where there is contact between the upper and lower parts of the blade set (see illustration).


Replacing the blade set

The blade set is subject to wear. Even if you look after the appliance properly, the cutting performance will deteriorate. Replace the blade set when it is worn. The blade set can be ordered separately as a spare part from Aesculap Customer Service (see addresses below).



Damage to casing when screwing on clipper head!

- Do not over tighten the screw.

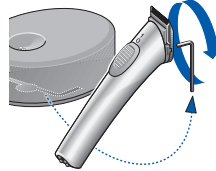

- Make sure the On/Off switch is in the 0 position.
- Remove the Allen key from the base of the charging unit and use it to loosen the blade set screw.
- Loosen the screw fully and remove it.
- Push the blade set upwards with your thumb.
- Push the new blade set on until it snaps into place and secure it using the screw.

While the blade set is removed, you can use the cleaning brush to remove residual hair from inside the appliance.

Cleaning the appliance

- Clean your appliance occasionally with a damp cloth, then wipe it dry.

Cleaning the charging contacts

If the charging contacts on the appliance or the charging contacts on the charging unit are dirty, charging may not be possible or may be interrupted.

- Clean the contacts using a cloth or wad of cotton wool soaked in alcohol or spirit.

If the battery is run down (motor stops), be sure to switch the On/Off switch to 0 and place the appliance in the charging unit.

- Make sure you do not leave the appliance switched on when putting it aside if the battery is run down.
- Make sure the appliance is switched off (On/ Off switch to 0) when you place it in the charging unit.